


**SPRING CURVE EXAMPLE FOR BAG-OVER SHOCK ABSORBER AT 100PSI**

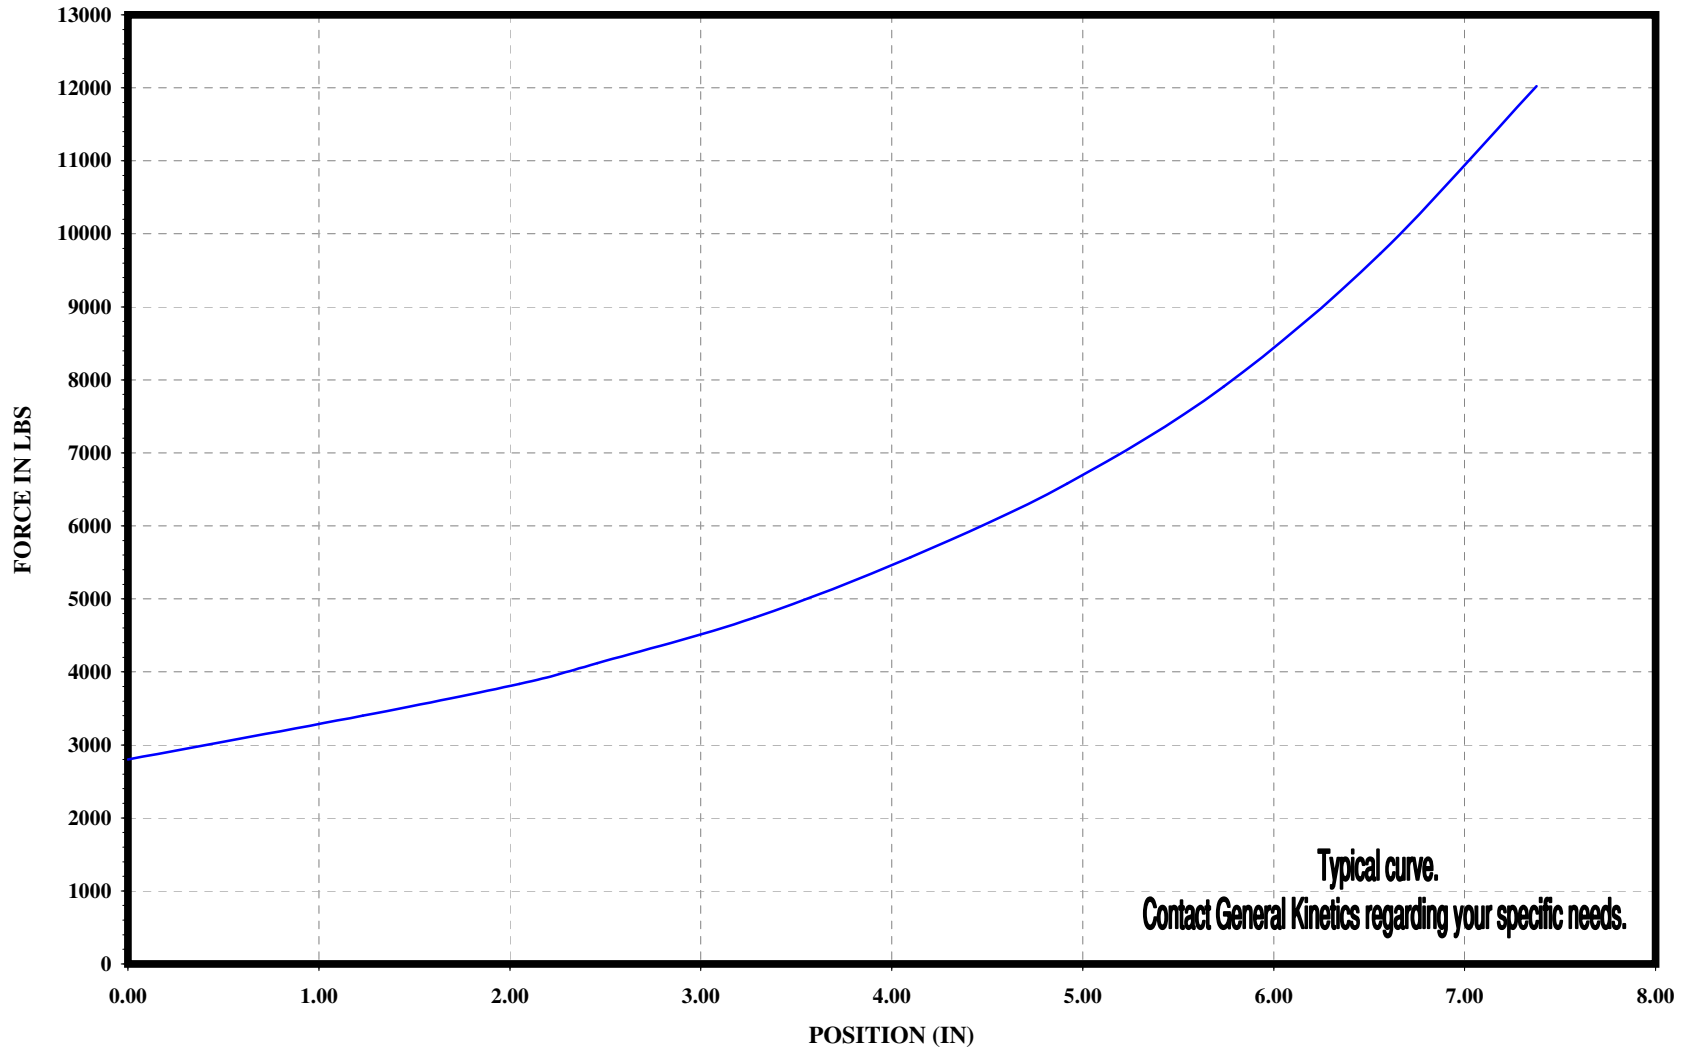

Typical curve.  
Contact General Kinetics regarding your specific needs.

— FORCE VS. DISPLACEMENT